




**MANUEL D'INSTALLATION KPA VINOA
KIT DE JUMELAGE DE 2 UNITÉS PLEINE GRANDEUR
(GRILLE DE VENTILATION 47" + VISES ET MOULURE EN « T »)
Pages 2 – 4**


**KPA VINOA INSTALLATION MANUAL
ASSEMBLY KIT FOR 2 FULL SIZE UNITS
(LONG KICKPLATE 47" + SCREWS AND T-STRIP MOLDING)
Pages 5 - 7**

MANUEL D'INSTALLATION KPA VINOA
KIT DE JUMELAGE DE 2 UNITÉS PLEINE GRANDEUR
(GRILLE DE VENTILATION 47" + VISES ET MOULURE EN « T »)


1. Gardez un espace d'au moins 4 à 6 mm entre les deux celliers; (veuillez-vous référer au schéma ①)
2. Les deux portes doivent être alignées avant l'installation, veuillez-vous référer au schéma ③, vérifiez, si les deux portes ne sont pas alignées; (veuillez-vous référer au schéma ②)
3. Ajustez les pieds de chaque unité pour maintenir le niveau d'alignement des deux portes; (veuillez-vous référer au schéma ③)

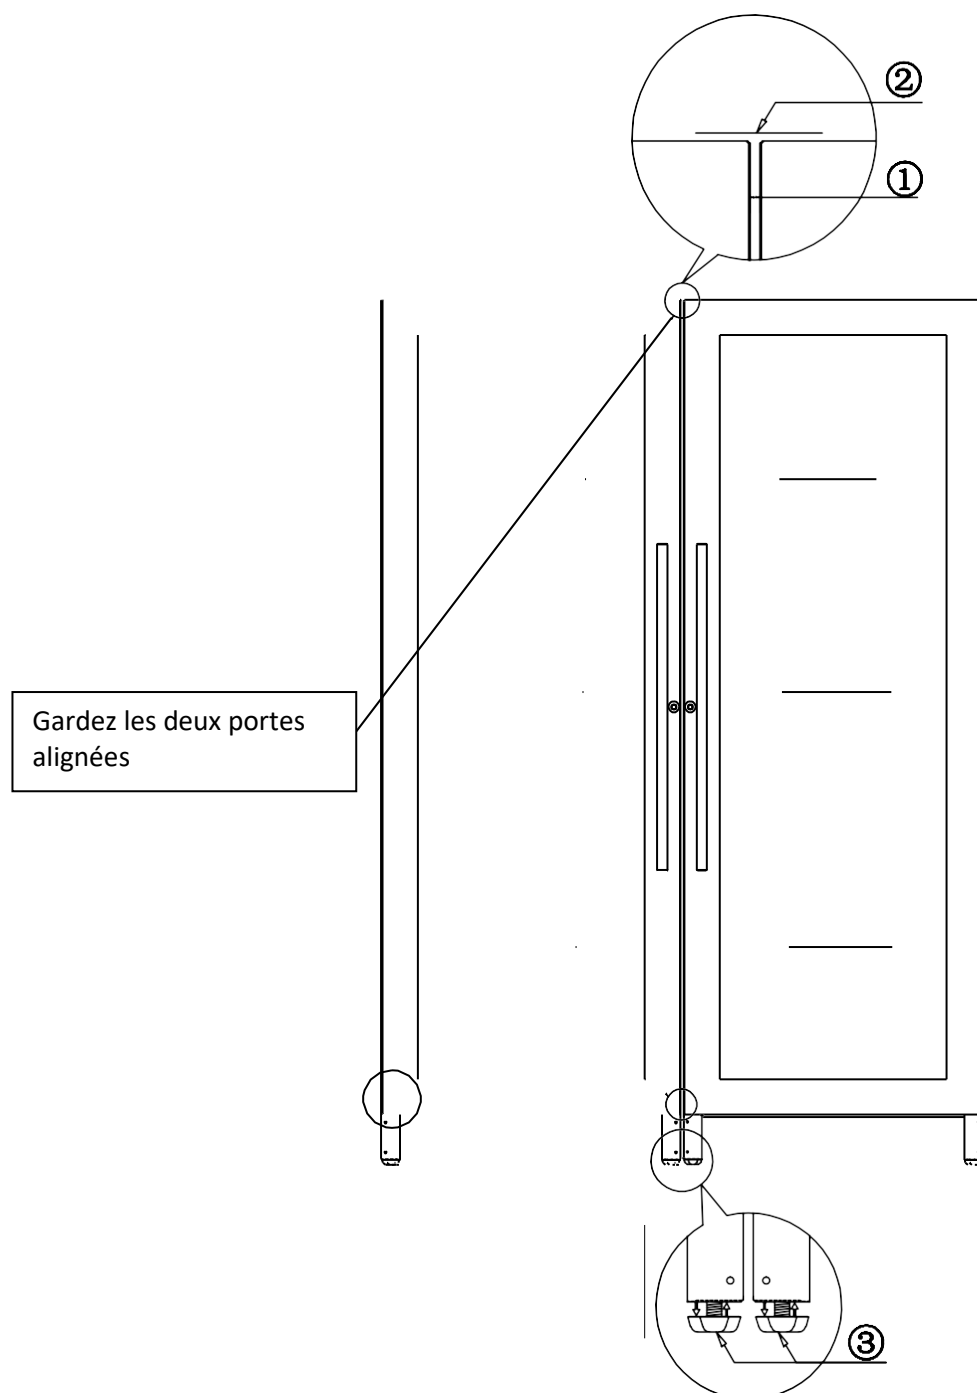

- Retirez les 4 clous décoratifs des celliers, puis installez les pièces de connexion supérieure et inférieure à l'aide d'un tournevis hexagonal pour les deux celliers; (veuillez-vous référer aux schémas ④&⑤)
- Insérez la moulure en forme de T dans l'espace de 5 mm entre les deux celliers et gardez-la lisse et stable; (veuillez-vous référer au schéma ⑥)

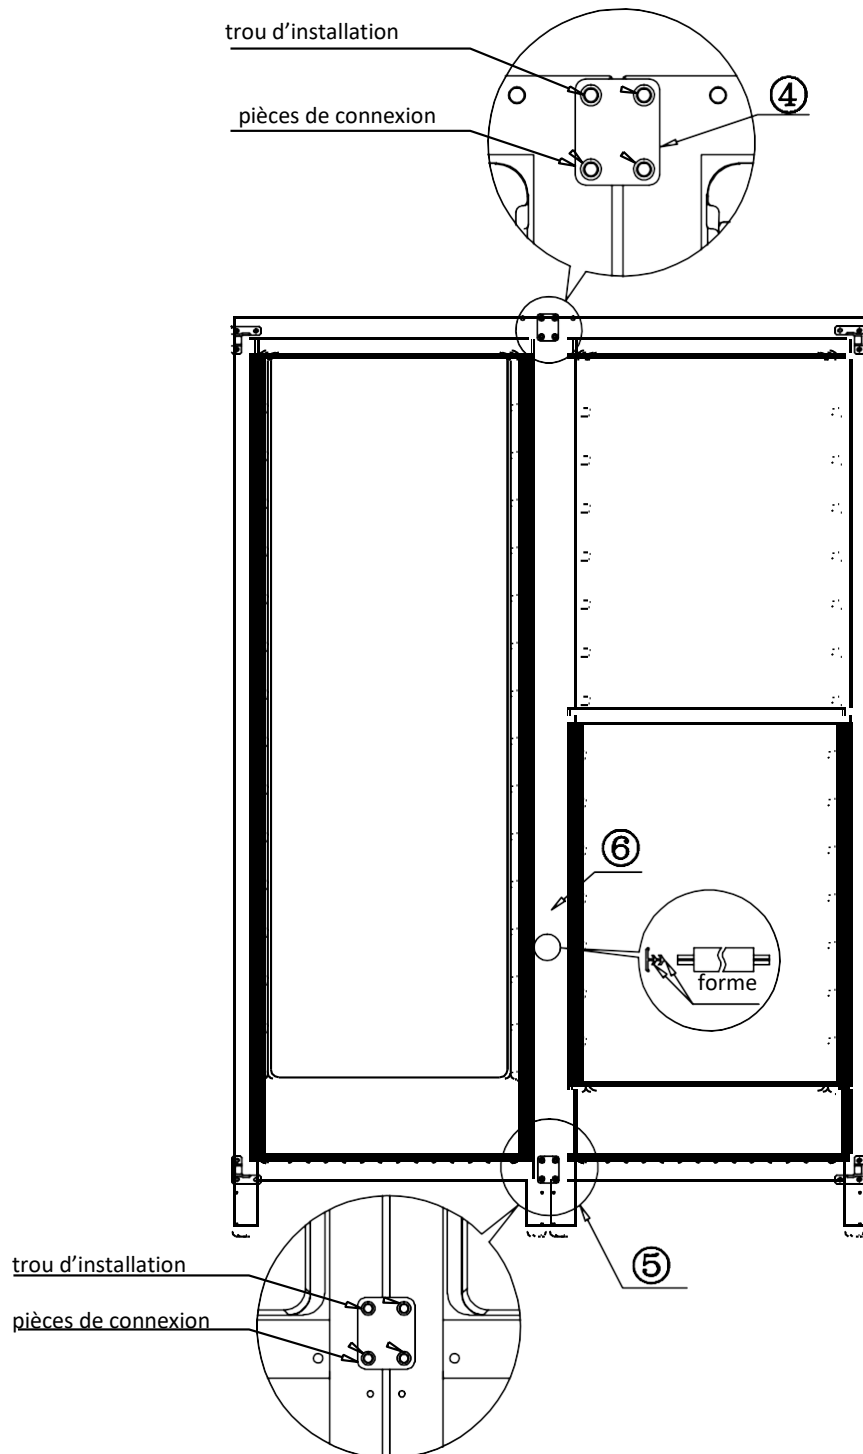


6. Pour installer la grille de ventilation en acier inoxydable 2 en 1, fixez la vis cruciforme sur le socle à l'aide d'un tournevis cruciforme: (veuillez-vous référer au schéma ⑦)

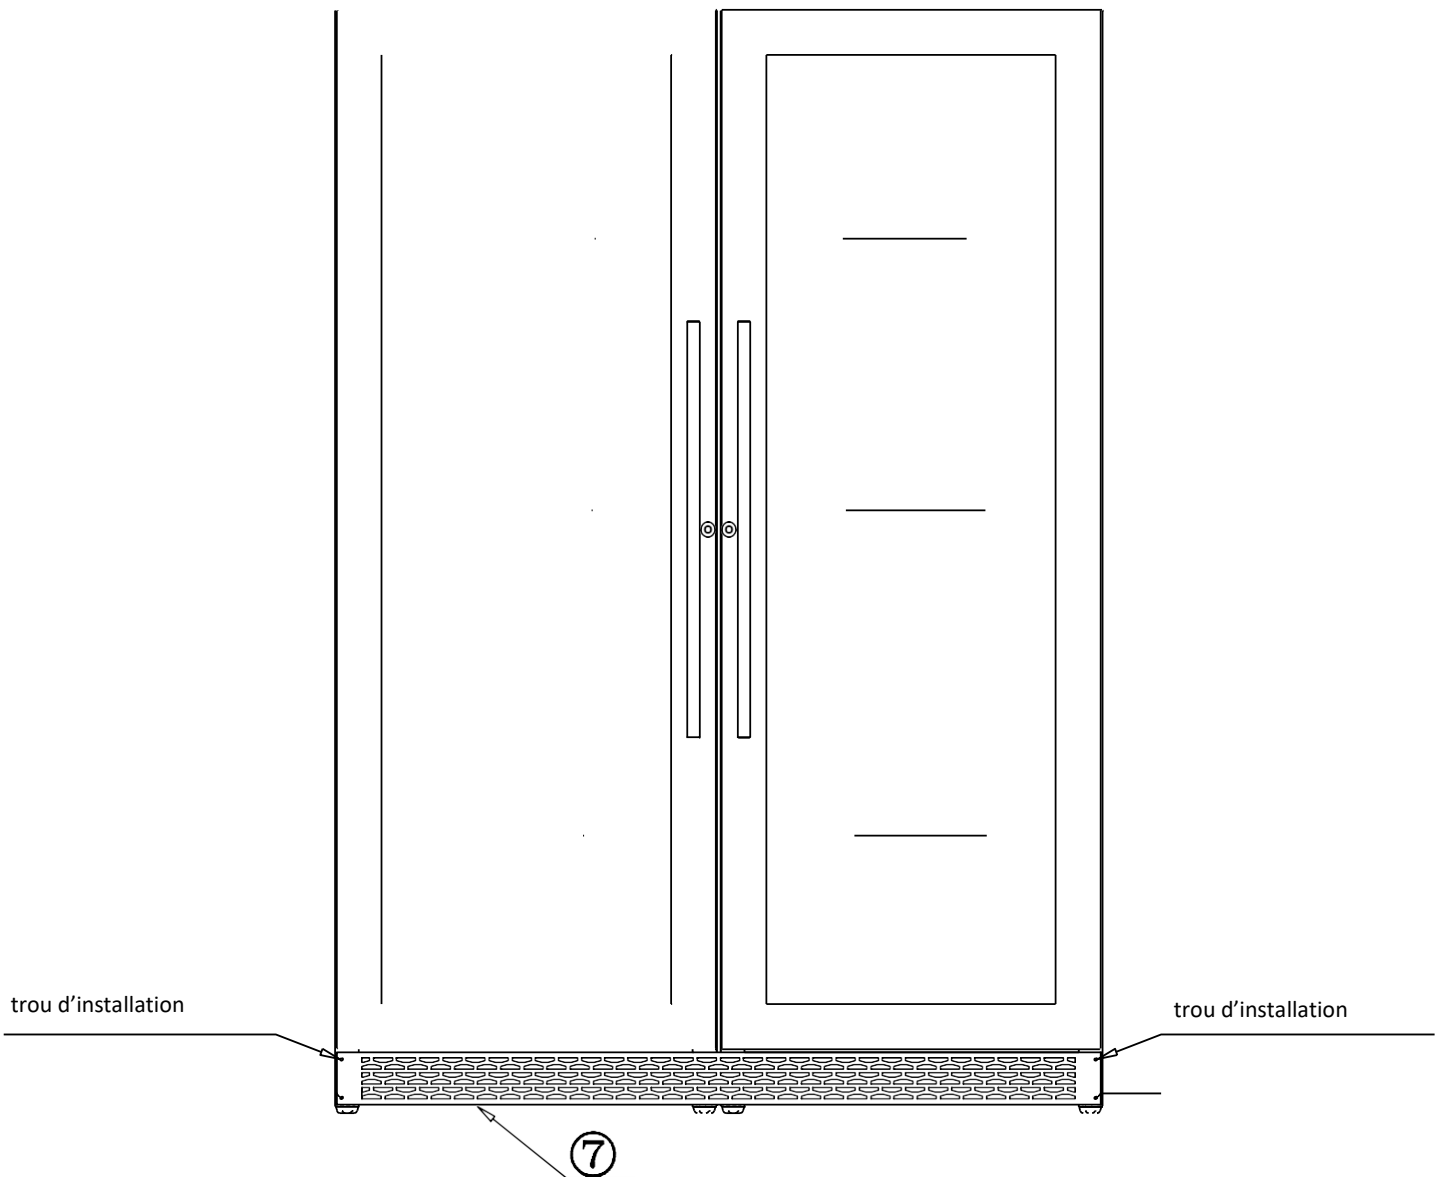


KPA VINOA INSTALLATION MANUAL
ASSEMBLY KIT FOR 2 UNITS FULLSIZE
(LONG KICKPLATE 47" + SCREWS AND T-STRIP MOLDING)

1. Keep space at least 4-6mm between two wine cabinets;(please refer to the following drawing ①)
2. Two doors should be aligned before installation, please refer to the drawing ③ view to operate if the doors aren't aligned;(please refer to the following drawing ②)
3. Please adjust the cabinet legs to keep two doors alignment level;(please refer the following drawing ③)

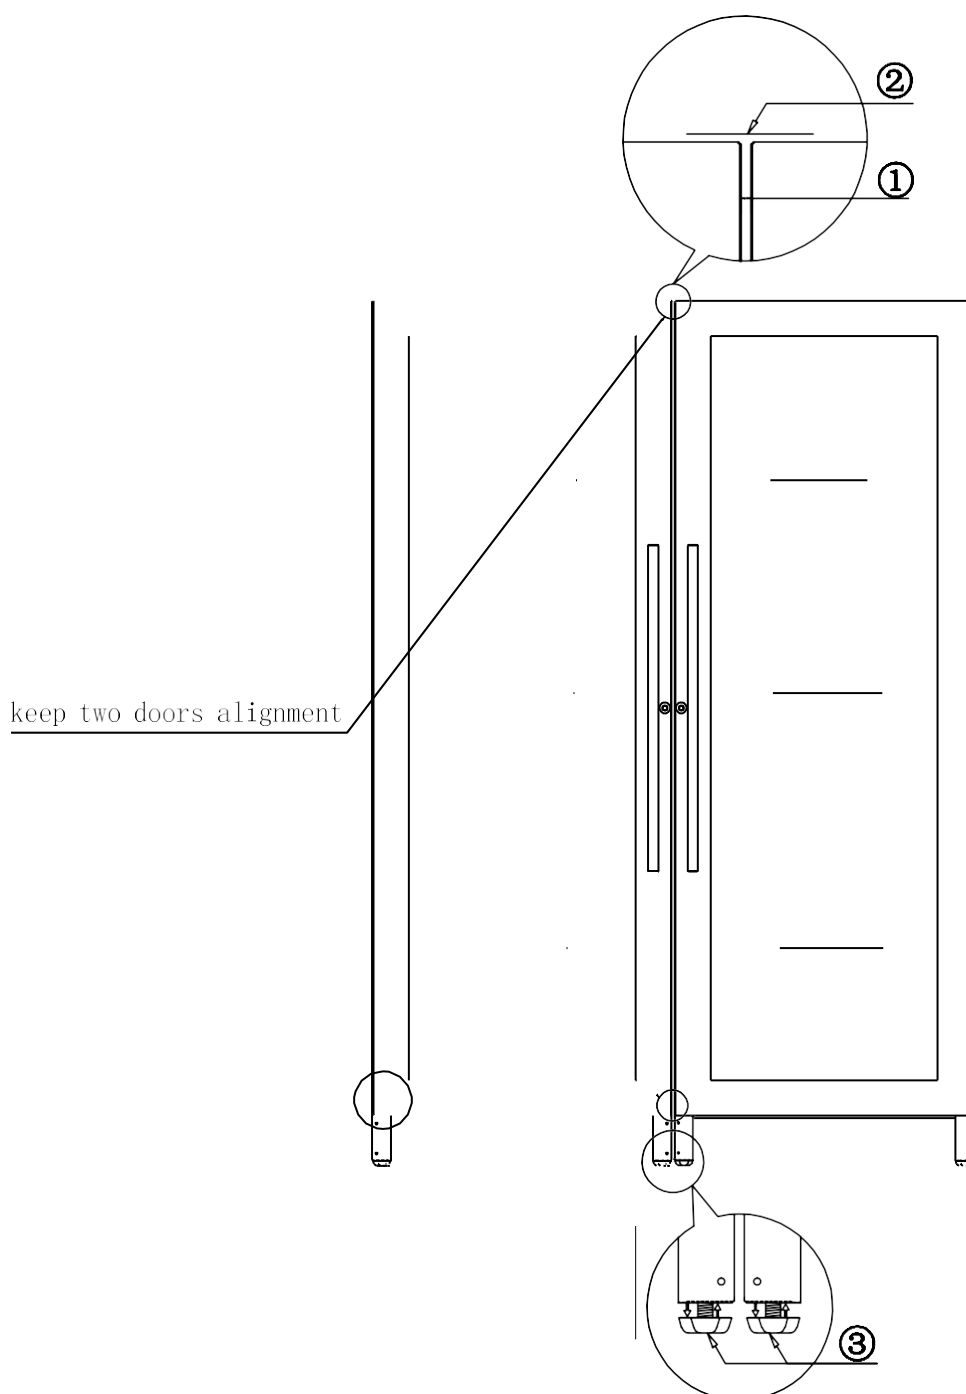

4. Take out the 4pcs of decorative nails from the wine cabinets, then install the upper and lower connection part with hexagon screwdriver for two wine cabinets;(please refer to the following drawings ④&⑤)
5. Insert the T-shape decoration strip into the 5mm gap between two wine cabinets, and keep smooth and stable;(please refer to the following drawing ⑥)

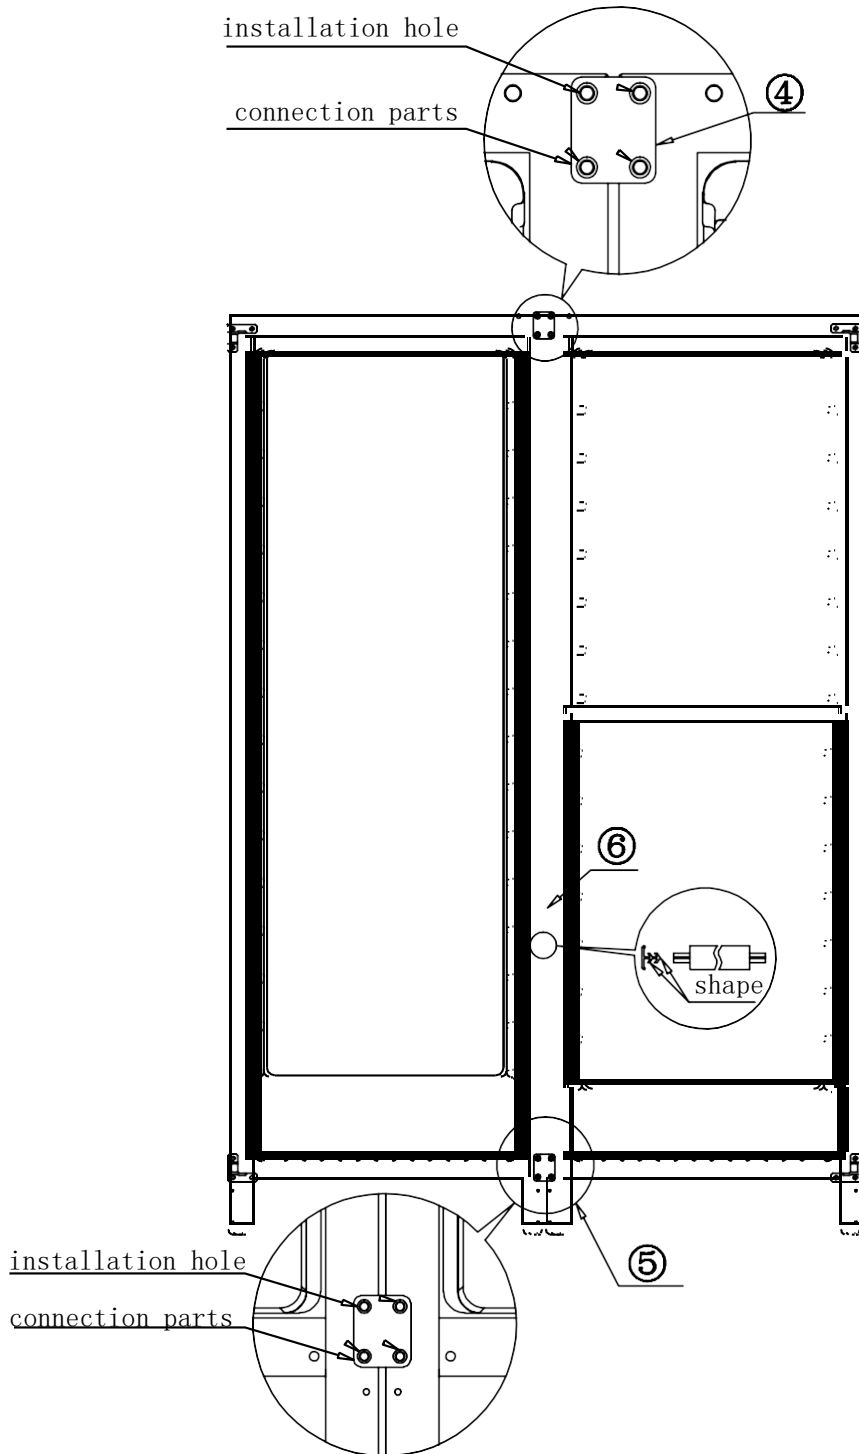

6. To install 2 in 1 stainless steel ventilation plinth, fix the cross-head screw on the plinth with phillips screwdriver: (please refer to the following drawing ⑦)

